

USB Game Port Adapter

This multi-functional game port adapter adapts most common game-controllers (game pads, joysticks, or wheels) with a 15-pin connector to a USB (Universal Serial Bus) port. You can use the adapter immediately, without installing any driver software. The adapter also lets you connect or disconnect the adapter and the connected peripheral without having to reset your computer system.

Note: This game port adapter is not recommended for digital game controllers.


SYSTEM REQUIREMENTS

The adapter works with IBM® and compatible PCs (486/Pentium®/Pentium II, Pentium III) operating on Windows 98® with a USB port.

INSTALLATION

Note: The adapter might limit some of the advanced features of certain game controllers, especially those controllers with driver software.

1. Turn on your PC.
2. Plug your game controller's 15-pin male connector into the adapter's 15-pin female connector.

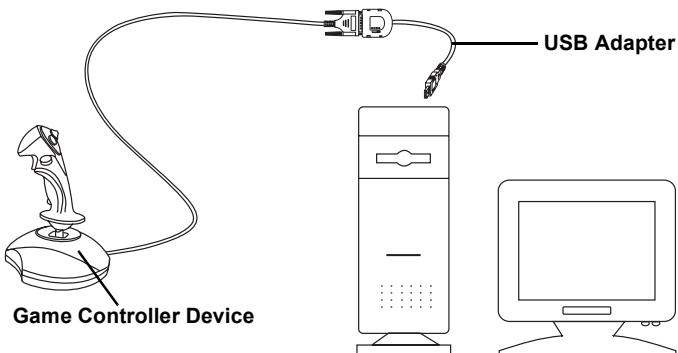

3. Set any mode switches on your game controller to the desired settings.
4. Slide the switch on the adapter to the desired position:
 - GAME PAD** — for a game pad
 - JOYSTICK A** — for a standard joystick (or CH flightstick-mode joystick)
 - JOYSTICK B** — for a joystick with a Thrustmaster hat switch
 - WHEEL** — for a racing wheel
5. Plug the adapter's USB plug into your PC's USB port.
6. **Searching for USB human interference device, New Hardware Found** (or a similar message) might appear. Click **Next** then follow the on-screen instructions to complete the installation.

CALIBRATION

For the best performance, follow these steps to calibrate the adapter.

1. Click **Start, Settings**, then **Control Panel** on your PC.
2. Double-click **Joystick** or **Game Controllers**.
3. Select **HID Game Controller: 4 axis 8 button joystick** then click **Properties**.
4. Slide the adapter's game-controller selection switch *away from* then *back to* the desired setting.
5. Click **Calibrate**.

Notes:

- The *Calibration* window shows four axes and a point of view hat. If your game controller does not support one of those features, click **Next** to skip it. (For example, if you do not have a throttle, skip axis 3.)
 - If one joystick mode does not work properly, try the other mode (**A** or **B**).
6. Calibrate your game controller according to the software's instructions, then click **Apply**.
 7. Click **Test** and try each of the game controller's controls to make sure each one operates properly.
 8. Click **OK**. You can now use the game controller you connected to your adapter.

CARE

To enjoy your RadioShack USB Game Port Adapter for a long time:

- Keep the adapter dry. If it gets wet, wipe it dry immediately.
- Use and store the adapter only in normal temperature environments.
- Handle the adapter gently and carefully. Do not drop it.
- Keep the adapter away from dust and dirt.
- Wipe the adapter with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the adapter's internal components can cause a malfunction and might invalidate its warranty. If your adapter is not performing as it should, take it to your local RadioShack store for assistance.

{The following DOC information should appear as a separate section from the FCC information on the following page. That is, they may appear on the same page, but should each have their own Level 2 head. The logo is optional, but should be used space permitting}

FCC DECLARATION OF CONFORMITY

This device complies with Part 15 of the *FCC Rules*. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Product:	USB Game Port Adapter
Model:	26-164
Responsible Party:	RadioShack 100 Throckmorton Fort Worth, TX 76102
Phone:	817-415-3200

THE FCC WANTS YOU TO KNOW

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the *FCC Rules*. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your local RadioShack store or an experienced radio/TV technician for help.
- If you cannot eliminate the interference, the FCC requires that you stop using your adapter.

Changes or modifications not expressly approved by RadioShack may cause interference and void the user's authority to operate the equipment.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102