

The following table lists possible jumper settings for your computer. Factory (default) settings are indicated with a check mark. Jumper settings are shown only for reference. They should not have to be changed for normal user operation. In the jumper settings table, a hyphen (as in E10-E11) means "jumpered." A comma (as in E10, E11, E12) means "not jumpered."

CONFIGURATION	JUMPER SETTING
PRIMARY MONITOR TYPE	
Enables Software Selection by Setup~	E11-E12
Color Monitor	E10-E11
Monochrome Monitor	E10, E11, E12
BIOS ROM TYPE	
128KB (16KB)	E22, E23 E24, E25
256KB (32KB)~	E22, E23 E24-E25
512KB (64KB)	E22-E23 E24-E25
1MB (128KB)	E22-E23 E24-E25
ON-BOARD HARD DISK (IDE) INTERFACE	
IOCHRDY JUMPER	
Standard Configuration~	E1-E2
IDE IOCHRDY Disabled	E1, E2
DIAG JUMPER	
Standard Configuration~	E3, E4
Diagnostic Mode	E3-E4
I/O RECOVERY	
Enabled (Standard)~	E8-E9
OPERATION MODE	
Standard Configuration~	E14-E15
	E17-E18
	E20-E21