

The selections you make with ACU.EXE are saved in the file AVGA2CFG.COM. If you are using the AVGACFG feature, run the AVGA2CFG file each time you start your system. To run the file from the MS-DOS command line, type AVGA2CFG and press ENTER.

To run the file automatically at each startup, add the following line to your AUTOEXEC.BAT file:

```
avga2cfg
```

Faxback Document # 1732 will describe how ACU.EXE is used.

Copying the VGA Utilities:
----------------------------

To use the VGA utilities, copy them to your startup diskette or hard drive directory. For example, if your operating system is in the root directory or a hard drive (Drive C), insert the Utilities & VGA Drivers diskette into Drive A and type the following commands to copy the files to C:\. Press ENTER after each command.

```
copy a:\acu.exe c:\
copy a:\avga2cfg.com c:\
copy a:\setmode.exe c:\
```

(jej-05/11/94)□