

Selectors 26 to 30 on the selector bar (numbered 1 to 5) define the setting for the optional serial interface. ONLY the selector(s) corresponding to the setting(s) required (see following table) should be raised; the others MUST remain down (all five selectors in OFF position = default value - 2400 baud, no parity, hardware handshake):

1	2	3	4	5	Serial Interface
					Baud rate: 2400
	X				Baud rate: 9600
X					Baud rate: 19200
X	X				Baud rate: 38400
					Parity: none
			X		Parity: even
		X			Parity: odd
					Handshake: hard
				X	Handshake: soft

Reserved

The last three selectors on the selector bar (1 to 3) are not currently assigned to any parameters in the resident emulation.

NOTE: The position of these selectors should NOT be altered.

(ALL-11/17/94)