

If you have followed the instructions in this manual but have difficulty operating your VCR, check the SYMPTOM column below. Then check the corresponding POSSIBLE CAUSE column to locate and correct the problem.

SYMPTOM	POSSIBLE CAUSE
No power.	Power cord is not connected.
	POWER is not set to on.
Timer recording is not possible.	The program timer is set incorrectly.
	The power is on.
Record mode cannot be engaged.	The erase-protection window on cassette is closed.
No picture on playback.	The video head is dirty. Head cleaning is necessary.
Off-the-air TV programs cannot be seen or recorded.	Connections are not correctly made
Clock operates erratically or locks up.	Press ALL CLEAR. Clock setting, tuner programming, and automatic timer settings are all lost.
No operation by remote control.	The remote control's batteries are weak or dead.

Modifying or tampering with your VCR's internal components can cause a malfunction and might invalidate the VCR's warranty. If your VCR is not operating as it should, the suggestions in the troubleshooting chart might help. If you still need assistance, take your VCR to your local Radio Shack store where our personnel can arrange for service if needed.