

You can set up the VCR to display all menu prompts in English or Spanish.

Turn on the system; then, follow these steps to initially set up the on-screen display menus.

1. Press PROG on the remote control. The program menu appears on the TV screen.

```
***MENU***  
  
1 CLOCK SET  
2 TIMER PROGRAM  
3 PROGRAM REVIEW  
4 VCR SETUP  
  
TO SELECT PUSH 1-4  
TO END PUSH PROGRAM
```

2. Press 4 on the remote control. The VCR setup menu appears.

```
VCR SET UP  
  
1 NORMAL/CATV (CATV)  
2 AUTO PROGRAM  
3 ADD/ERASE CHANNEL  
4 T160/120 (120)  
5 ENGLISH/ESPANOL  
  
TO SELECT PUSH 1-5  
TO END PUSH PROGRAM
```

3. Press 5 to select ENGLISH/ESPANOL.

Note: Once you select English or Spanish, all menus will always appear in the language you selected.

(/all-12/13/94)