

This printer has an error detection function. When errors occur, they are displayed by the indicators and the printer will stop operating. If the printer does not print or feed the paper, check the status of the indicators described in the table below. If the problem still persists after following these instructions, contact your service representative for assistance.

Power	On Line	Paper Out	Alarm	Buzzer	Remedy
Off	Off	Off	Off	Off	(1)
On	Off	On	On	Sounds 2 times	(2)
On	Off	Off	On	Sounds continuously	(3)
On	Off	---	Blinks	Sounds continuously	(4)
On	Blinks	---	Off	Sounds continuously	(5)
Blinks	Off	---	Off	Off	(6)
On	Blinks	---	Off	Sounds 5 times	(7)
On	Blinks	---	Blinks	Sounds 3 times	(8)
Blinks	Off	---	Blinks	Sounds 5 times	(9)

Remedies:

- (1) Indicates that the power cable is improperly connected and/or that the power switch is turned off.
- (2) Indicates that the printer is out of paper. Load new paper and then press the LF/FF switch to resume printing.
- (3) Indicates that the paper cannot be advanced because of a paper jam or paper over 15" is loaded. Reload the paper correctly and press the LF/FF switch to feed the paper.
- (4) Indicates that the carriage does not stay at the correct home position. Turn the power off and turn it back on.
- (5) Indicates that the vertical line gaps cannot be automatically adjusted. Turn the power off and then back on.
- (6) Indicates that the optional battery power is low or it is not loaded properly.
- (7) Indicates a RAM checksum error. Turn the power off and then back on.
- (8) Indicates a ROM checksum error. Turn the power off and then back on.
- (9) Indicates that the service life of the battery pack has expire. Use a new battery pack.

(jej 04/26/94)