


Before connecting your CM-10 to a computer or power source, it is recommended that you read the instructions located in the section of your manual labeled, "Using the CM-10". The information below will only provide general information about the parts of your monitor.

#### FEATURES AND CONTROLS

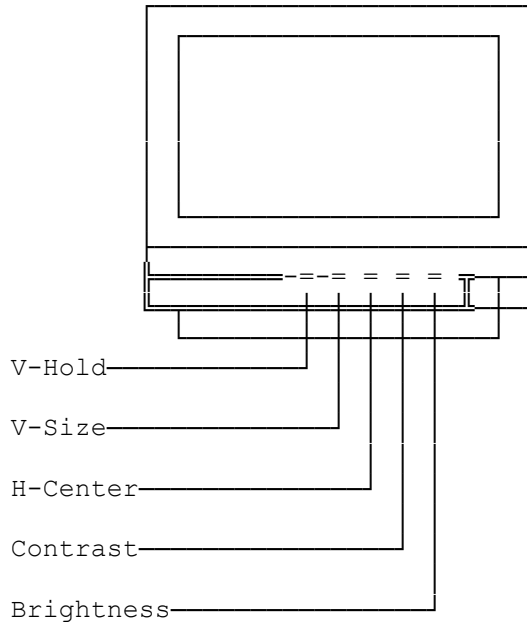

#### USING THE CM-10

Power up all equipment. Use your system owner's manual for instructions on powering your computer and other peripherals.

After power-up, you may need to adjust the display of the CM-10.

#### ADJUSTING THE DISPLAY

The five display adjustment knobs are located below the video screen on the left side behind the control panel. The panel door swings down when it is gently pulled forward at its left-most corner.

**V-HOLD**--This control stabilizes the display on the screen. Rotate the knob fully counter-clockwise and then slowly clockwise until the display is stable.

**V-SIZE**--This control sets vertical size.

**H-CENTER**--This control sets horizontal position. Rotate the knob to center the display.

**CONTRAST** and **BRIGHTNESS**--Adjust the screen brightness to compensate for room lighting.

\* If the room is dark, rotate either or both of these controls

counterclockwise until the picture is easily visible.

- \* If the room has bright light, rotate either or both of these controls clockwise until the picture is easily visible.
- \* The CONTRAST control also adjusts separation of low and high intensity characters as required.

(abo-07/27/93)

(smm 08/25/93)