



Contrast and Brightness: Adjust the contrast and brightness controls to suit the room's lighting and your viewing preferences.

Power ON/OFF: To turn on the VGM-340, press POWER. The POWER indicator lights. Press POWER again to turn off the monitor.

Horizontal Position: Turn clockwise to move the horizontal position to the right; turn it counterclockwise to move the horizontal position to the left.

Vertical Position: Turn clockwise for a higher display position; turn it counterclockwise for a lower display position.

Horizontal Size: Turn clockwise to widen the horizontal size of the display. For a narrow display, turn H-SIZE counterclockwise.

Vertical Size: Turn clockwise for a larger display; turn it counterclockwise for a smaller display.

Side Pincushion: Turn to adjust the left and right sides of the
 display so these lines are straight (no pincusion).

CAUTION: If the same characters or graphics are shown for a long time with
the contrast and brightness controls set to their maximum positions, part of
the screen might be damaged.