



Contrast and Brightness: Adjust the contrast and brightness controls to suit the room's lighting and your viewing preferences.

Power ON/OFF: To turn on the VGM-440, press POWER. The POWER indicator lights. Press POWER again to turn off the monitor.

Horizontal Phase: Adjusts the horizontal position of the display. Turn the knob clockwise to move the horizontal position to the left or turn it counterclockwise to turn it to the right.

Horizontal Size: Adjusts the horizontal size of the display.

Side Pincushion: Adjusts the left and right sides of the display so that these lines are straight (no pincushion).

Vertical Size: Adjusts the vertical size of the display. Turn the knob clockwise for a smaller display or turn it counterclockwise for a larger display.

Vertical Center: Adjusts the vertical position of the display. Turn the knob clockwise for a lower display position or turn it counterclockwise for a higher display

CAUTION: If the same characters or graphics are shown for a long time with the contrast and brightness controls set to their maximum positions, part of the screen may be damaged.