



Contrast - Adjust this control for the proper contrast level.

Brightness - Adjust this control for overall brightness of the display screen.

CAUTION: If the same characters or graphics are shown for a long time with the contrast and brightness controls set to their maximum positions, part of the screen might be damaged. Use these controls with care.

Horizontal Position - Adjust this control to horizontally position the display. Turn H-POSI clockwise to move the display to the right or counterclockwise to move it to the left.

Vertical Position - Adjust this control to vertically position the display. Turn V-SIZE clockwise to move the display up or counterclockwise to move it down.

Horizontal Size - Use this control to adjust the display's width. Turn H-SIZE clockwise to widen the display or counterclockwise to narrow it.

Vertical Size - Use this control to adjust the display's vertical size. Turn V-SIZE clockwise to increase the display's vertical size or counterclockwise to decrease it.

Side Pincushion - Adjust this control to correct the display's vertical lines from bowing in or out. Turn SIDE-PIN clockwise to barrel the display's vertical lines or counterclockwise to dent them.

