

SYMPTOM

SOLUTION

Eight short beeps sound:

When you press [ANNOUNCE RECORD].	(Outgoing-announcement tape is missing.) Install tape.
-----------------------------------	---

When you press [ANSWER], [PLAY], [REWIND], [FAST-F], [ERASE] REWIND], or [MEMO].	(Incoming-message tape is missing.) Install tape.
--	--

When you press [REWIND], [FAST-F], or [ERASE REWIND].	(INCOMING MESSAGE switch is set to ANN. ONLY.) Set to correct position.
---	---

When your press [ERASE REWIND] or [REWIND].	(Incoming-message tape is at the beginning.) Press [PLAY] or [FAST-F].
---	--

Eight short beeps sounds and the ANSWER and MEMO indicators flash.	(Incoming-message tape ends before caller completes recording.) Replace tape.
--	---

(Outgoing-announcement tape ends and rewinds before recording is complete.) Replace tape with one of correct length.

(One or both tapes are torn.) Replace tape.

ANSWER AND MEMO indicators blink after problem is corrected.	(Possible internal circuitry or tape mechanism error.)
--	--

1. Press [STOP],
 2. Turn the VOLUME/Power control off, then back on.
 3. Disconnect, then reconnect the adapter.
-

Eight short beeps sound when security code is being entered.	(Code was not entered within the required 7 seconds.) Reenter following correct steps within the allotted 7 seconds.
--	--

Eight short beeps sounds when you attempt remote control operation.	(You are at the end of the incoming-message tape. The tape is full.) To hear the message, enter your security code within 7 seconds of the beeps. The new message group automatically rewinds and plays back.
---	---
