

## CONTRAST

Adjust this control for the proper contrast level.

## BRIGHTNESS

Adjust this control for overall brightness of the display screen.


CAUTION: If the same characters or graphics are shown for a long time with the contrast and brightness controls set to their maximum positions, the screen might be damaged. Use these controls with care.

## MICROPROCESSOR-CONTROLLED ADJUSTMENTS

Your VGM-500 senses the timing signals from your computer and automatically adjusts the picture's size and position. You can adjust the screen to suit your own preferences using the control buttons. About 5 seconds after your last adjustment, the monitor stores your setting and uses your setting when it detects matching timing signals.


NOTE: When you begin making adjustments, the power indicator changes from green to orange. When the monitor store the adjustments, the indicatorchanges back to green.

HORIZONTAL POSITION:

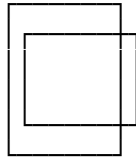

Press this button for the proper horizontal position of the display. Then press + to move the display to the right or - to move it to the left.

VERTICAL POSITION:

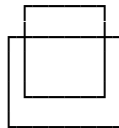

Press this button for the proper vertical position of the display. Then press + to move the display up or - to move it down.

HORIZONTAL SIZE: [<->]

Press this button for the desired width of the display. Then press + to widen the display or - to narrow it.

VERTICAL SIZE: [up/down arrow]

Press this button for the desired vertical size of the display. Then press + to increase the display's vertical size or - to decrease it.

SIDE PINCUSHION: [sides bowed in]

Press this button to correct the vertical lines on the display from bowing out or in. Then press + to make the display's vertical lines curve out or - to make them curve in.

SPECIAL ADJUSTMENTS:

PARALLELOGRAM:

Press and hold down HORIZONTAL POSITION. Then, press VERTICAL POSITION for 4-5 seconds so the power indicator's color changes from orange and back to green. Then press + to adjust to the right when the vertical sides are tilted left or - to adjust to the left when the vertical sides are tilted right.

TRAPEZOID:

Press and hold down HORIZONTAL POSITION. Then press HORIZONTAL SIZE for 4-5 seconds so that the power indicator's color changes from orange and back to green. Then press + to increase the size of the lower part of the display or - to decrease the size of the lower part of the display.

CLEAR: >[]<

Press this button for 2-3 seconds to reset.

NOTE: This operation only affects the current mode.

(tlc/all-07/07/94)