


This drive has a jumper block of 6 pins, located between the power connector and the IDE interface connector.

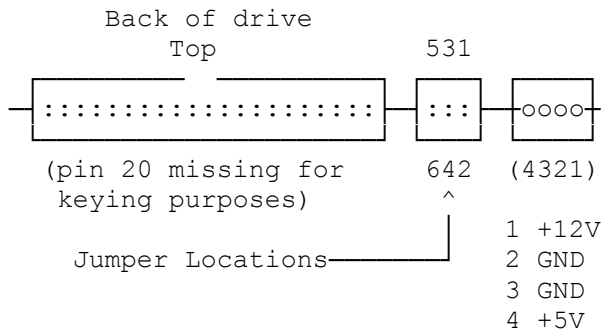

Designation	Jumper
Master (only drive)	all removed (default)
Master (with slave)	5-6
Slave	3-4

Note: For use with a 25-1095 adapter use master (only drive) jumper setting.



(abo-07/30/93)