

REMOTE CONTROL

Installing the Remote Control's Batteries

The remote control requires two AA batteries (not included) for operation. We recommend alkaline batteries (Radio Shack Cat. No. 23-552).

1. Remove the battery compartment cover by pressing the cover in the direction of the arrow.
2. Place two fresh AA batteries in the compartment, as indicated by the polarity symbols (+ and -) marked inside.
3. Replace the cover.

NOTE: If the remote control does not work or operates poorly, replace both batteries.

CAUTIONS: Use only fresh batteries of the recommended size and type.

Always remove old or weak batteries. They can leak chemicals that can damage electronic circuits.

Setting the Remote Control Codes

The supplied remote control works with several different brands of TVs and cable (CATV) converters. You can use the multibrand remote to operate basic function of your TV, your cable box, and your VCR.

Follow these steps to enter your brand of TV or cable converter.

1. Look at the charts and find your brand and its corresponding code.
2. While holding down TV or CATV on the remote, use the number buttons to enter your brand's code.

TV BRAND	CODE
EMERSON	17
FISHER	03
GE	07
GOLDSTAR	01
HITACHI	02
JVC	15
MAGNAVOX	08
MEMOREX	01, 03
MITSUBISHI	14
PANASONIC	12
RCA	06
SAMSUNG	16
SANYO	03
SHARP 1	00
SHARP 2	13
SONY	11

TECHNOL ACE	05
TOSHIBA	04
ZENITH 1	09
ZENITH 2	10

CABLE CONVERTER BRAND	CODE
ARCHER	00,11,29
CABLEVIEW	00,11,29
CITIZEN	00,11,29
CURTIS	19,25,32
DIAMOND	00,29
EAGLE	14,15,33
GC BRAND	00,11,29
GEMINI	05
GENERAL ELECTRIC	18
GENERAL INSTRUMENT	01,05,09,16,28
HAMLIN	12
HITACHI	13
JERROLD	01,05,09,16,28
MACOM	13
MAGNAVOX	14,33
MOVIETIME	20
NSC	20
OAK	04
PANASONIC	06,08,21
PHILIPS	14,31
PIONEER	06,23
PULSER	00,11,29
RCA	06,08,21
REGAL	12,14,17
SAMSUNG	05,06,11,22
SCIENTIFIC ATLANTA	19,25,32
SL MARX	05,06,11,22
SPRUCER	06,08,21
STARGATE	00,05,06,11,22,29
TEKNIKA	30
TELECATION	26
TELEVIEW	05,06,11,22
TOCOM	07,10
UNIKA	00,11,29
UNIVERSAL	24,27
VIDEO WAY	02,03
VIEWSTAR	14,15,33
ZENITH	02,03

NOTES: POWER, 0-9, 100/ENTER, INPUT, and CHANNEL/TRACKING \ / or \ \ operate the corresponding functions of the selected device.

If your TV or cable converter's brand does not appear in the chart, use the original remote control supplied with the TV or converter.

You can use TV VOLUME \ / and \ \ without selecting TV first.

You cannot use the remote control to operate devices that have no remote control feature or that use older ultrasonic remote control methods.

If the cable box cannot be operated, try another number in the chart (if applicable).

Cable companies may charge an extra monthly fee to activate the remote control feature of a rented CATV converter.

When you change the batteries in the remote control, the code settings are lost. You must re-enter them.

Using the Remote Control

Before operating the remote control, press VCR, TV, or CATV to select the device you want to control.

Aim the remote control at the device's infrared window, and press the desired function buttons.

(ALL-11/09/94)