


Communications Port Selection

NOTE: Wait 0 (T0) and Wait 1 (T1) Jumper Pins should be left jumpered in their Default positions, which are:


- T0 - Jumpered
- T1 - Not Jumpered

The COM port jumpers are located immediately above the bright, metallic crystal, at the far end of the board from the mounting bracket. They look like this:

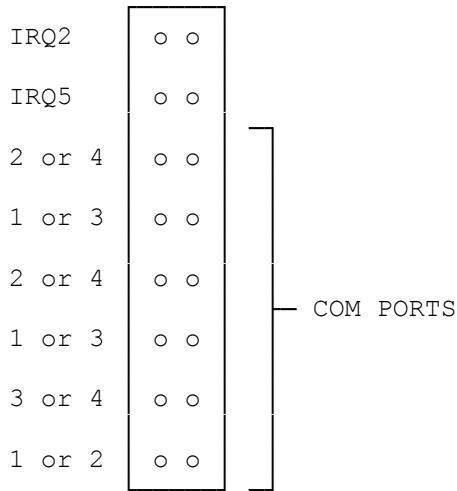

Three jumpers are used to set the COM ports:


To select:

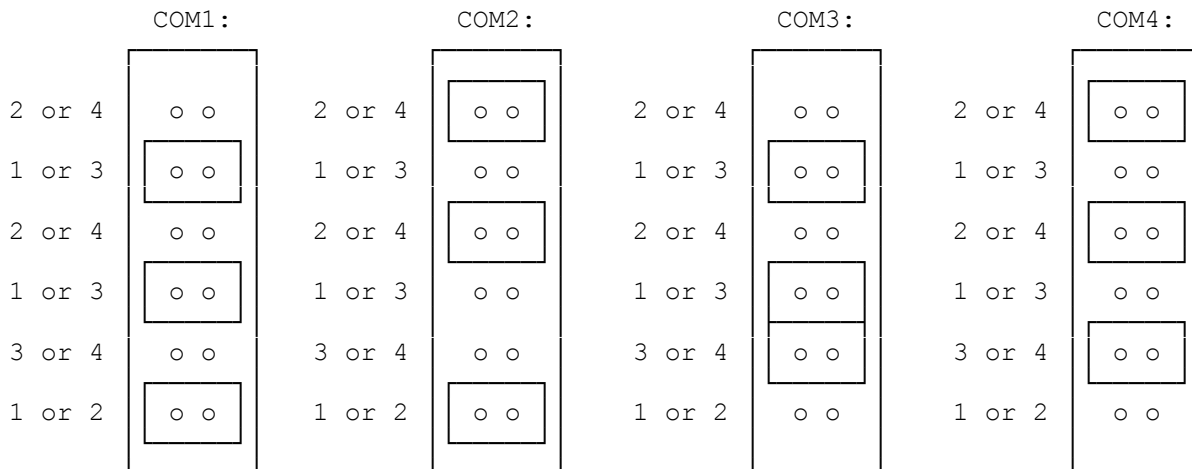

Setting IRQ2 and IRQ5:

To select:

- COM5:
- COM6:
- COM7:
- COM8:

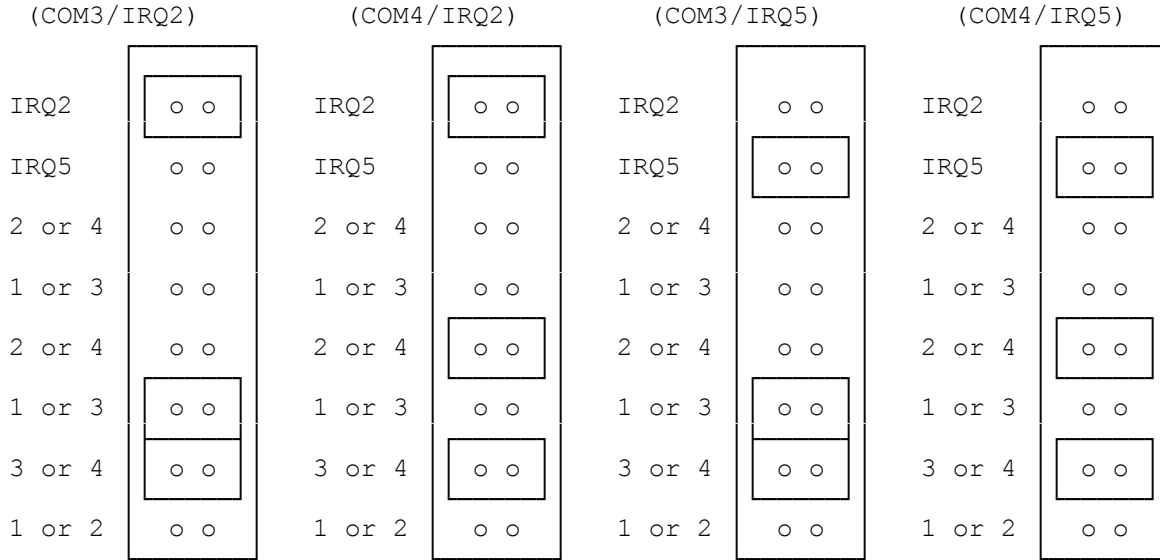

Programmers may find the following information useful:

	COM1	COM2	COM3	COM4
I/O Address Range	3F8-3FF	2F8-2FF	3E8-3EF	2E8-2EF
Interrupt Number	4	3	4	3
Interrupt Vector Address	30H	2CH	30H	2CH

(dte-07/28/93)